

## Nissan Leaf High Voltage (HV) Battery Charge Controller Operating Instructions (Leaf model AZE0-2)

Thank you for supporting EVs Enhanced with your purchase. This HV Battery Charge Controller allows you to add AC Charge limits to your AZE0-2 Nissan Leaf to help extend the usable life of your HV battery. For product support, please contact your reseller.

### To Set your Charge Control limit

1. With the vehicle in ready mode, use the Instrument cluster controls to select the State of Charge display on your cluster. Ensure that the climate control is set to off before beginning this process.



2. Press the Rear demister button 5 times to enter the charge control selection. The instrument cluster will alternate flashing between the current charge limit and 3 dashes as per the images.



3. While flashing, use the front demister and rear demister buttons to increase and decrease the charge limit to the desired setting.

Front demister +5% State of charge

Rear demister -5% State of Charge

Once the desired setting is selected, leave the buttons for 5 seconds and the cluster will return to the current State of Charge

Front demister →

Rear demister →



4. To readjust the charge limit, refer back to step 1.